



SIGNIFICANT CHARACTERISTICS & DETAIL:

- 1.The drawing shows positioning and orientation of gal holes
- 2.Positioning of pipe in relation to end profile.
- 3.Positioning of slat supports.
- 4.Positioning of cleat, (base plate hidden)

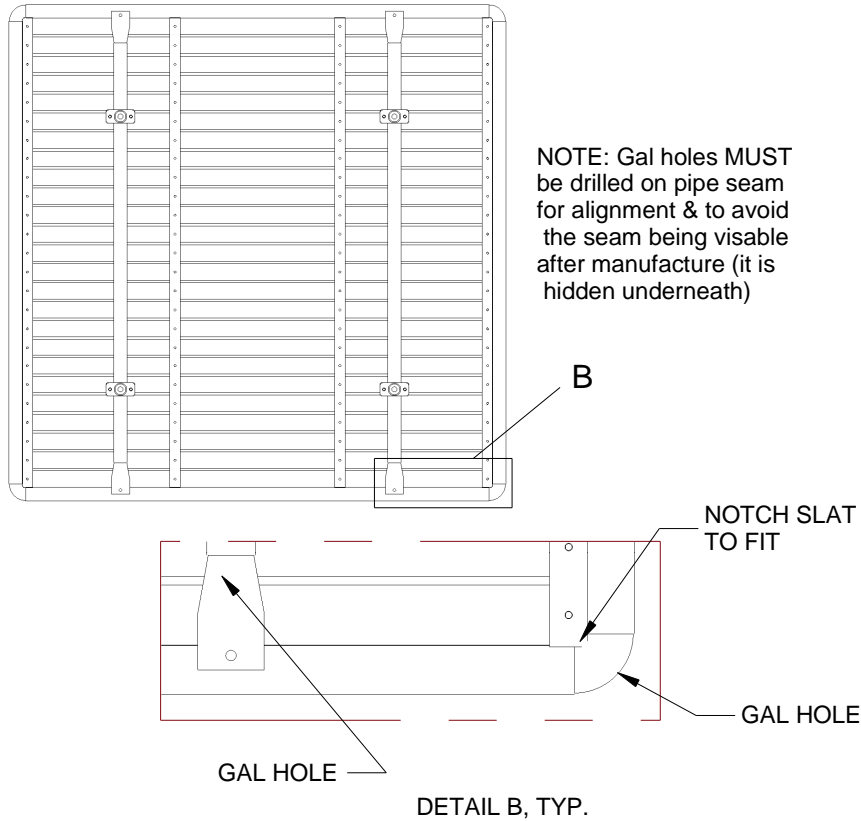

ASSEMBLY

1. Inspect table profile for any imperfections
2. Place table profile onto work bench
3. Place all timbers into table and fasten lightly, once all coach bolts are in place tighten all
4. Turn table upside down and fasten centre braces using timber tek screws
5. Place table to side for Final Inspection and packaging.

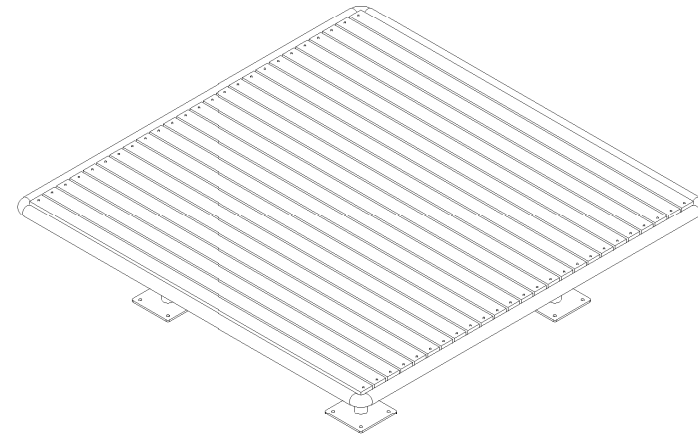

Quality
ISO 9001
SAI GLOBAL



CONFIDENTIAL

REVISION	#	DESCRIPTION	BY	DATE	DRAWN	DRAWN DATE	CHECKED	CHECKED DATE	SCALE	A4
	1	1	ORIGINAL DRAWING	RBC	5.11.13	R.CRIGTON	5.11.13			
2	2						WOODGROVE SQUARE PLATFORM - BOLT DOWN ASSEMBLY			
3	3									
4	4						FFSB003024		REV. 1	SHEET 3 OF 3
5	5									

